

The maximum 'cable extension' for each section is 800M.

For example -

Power supply to the last 1083/55 distributor = 40M  
 1083/55 distributor to monitor = 15M (multiplied by eg 40 apartments) = 600M.  
 40M + 600M = 640M cable extension.

Cables for electric releases, proximity readers etc are not included in the cable extension calculation.

The maximum number of sections is 32 therefore the maximum number of apartments is 32 x 50 = 1600

The maximum 'cable extension' for each section is 800M.

For example -

Entry panel 1 to power supply = 20M  
 Entry panel 2 to power supply = 100M  
 Power supply to the last 1083/55 distributor = 40M  
 1083/55 distributor to handset = 15M (multiplied by eg 40 apartments) = 600M.  
 20M + 100M + 40M + 600M = 760M cable extension.

Cables for electric releases, proximity readers etc are not included in the cable extension calculation.


The maximum number of sections is 32 therefore the maximum number of apartments is 32 x 50 = 1600

**NOTES:**


1. This schematic is for guidance only and should not be used for installation
2. Maximum distance from door entry panel to 1083/75 is 100m using Cat5e cable
3. Maximum distance from 1083/75 to the monitor is 125m using Cat5e cable
4. Maximum distance from 1083/55 to the monitor is 50m using Cat5e cable
5. Spare cores in Cat5e cable must not be used for other services -




**6. Add a cable for the electric release -**

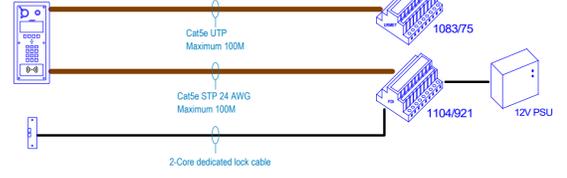

**7. Cabling for double pole push to exit switch, double pole break glass unit and maglock -**

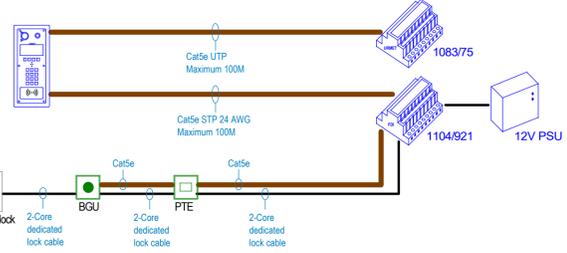

**8. Up to four monitors can be connected to ring together -**

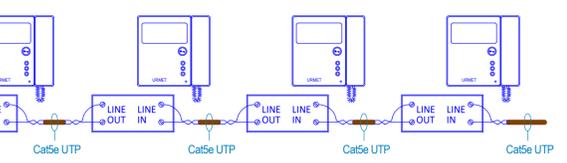

Online training available here -

